ENGLISH

“Water pump drive belt installation tool suitable for PSA engines”

Rev.0 012020

FG 192/PSA

TIMING TOOLS

The reproduction of this document (even in partial form) is prohibited without the Fasangas S.r.l. authorization

WARNINGS

ALWAYS REFER TO THE VEHICLE MANUFACTURER'S INSTRUCTIONS AND TO THE MANUAL OF THE VEHICLE IN ORDER TO KNOW THE DATA AND PROCEDURES THAT YOU MUST USE.
THIS DOCUMENT MUST BE USED ONLY FOR INFORMATION.

ALWAYS USE PROPER PROTECTIVE GLOVES

ALWAYS USE PROPER PROTECTIVE GLASSES

ATTENTION
The wrong timing or out of phase of the engine can result in a damage of the valves.
The use of these timing tools is at solely discretion of the user and, the Fasangas Srl can not be held responsible for any damage to the engine caused by the use of these timing tools.

IMPORTANT SAFETY INSTRUCTIONS:

- ALWAYS disconnect the battery earth leads (before check the radio code if it's available)
- DO NOT turn crankshaft or camshaft with the timing belt/chain removed.
- Remove spark plugs to make the engine turn easier.
- ALWAYS turn the engine in the normal direction of rotation (unless otherwise stated).
- Mark the position of the crankshaft position sensor before disassembly (If it's supplied).
- NEVER turn the crankshaft via camshaft or other gears.
- ALWAYS observe all tightening torques.
- NEVER use cleaning fluids on belts, sprockets or rollers.

CONTENT

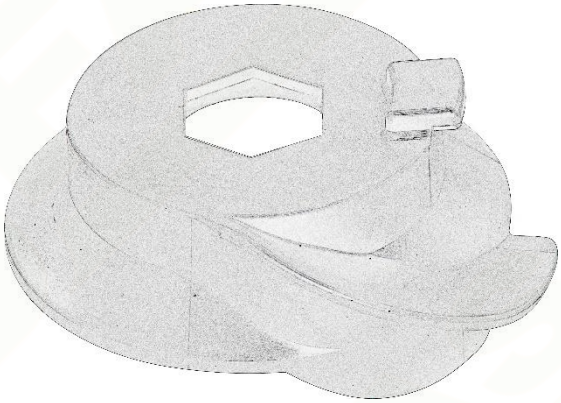

OEM code	Description / Use
EN-52112-2	Water pump drive belt installation tool

Opel/Vauxhall

MODEL	kW (hp) rpm	ENGINE CODE	ENGINE	
Crossland X (2017 – 2018)	96 (130) 5500	LEG/EB2DTS	1,2 Turbo	P
Grandland X (2017 – 2018)	96 (130) 5500	LES/B12XHT (EB2DTS)	1,2 Turbo	P
Crossland X (2017 – 2018)	81 (110) 5500	LES/EB2DT	1,2 Turbo	P
Crossland X (2017 – 2018)	60 (82) 5750	LEZ/EB2F	1,2	P

Citroën: C1, C3, C3 Picasso, C3 Aircross, C4, C4 Picasso, C4 Cactus, C-Elysee, Berlingo, DS3, DS4, DS4S, DS5LS

Peugeot: 108, 208, 301, 308, 408, 2008, 3008, 5008, Partner